



PIPE & INDUSTRIAL TOOLS

Operator's & Safety Manual

4-48 Inch Pipe Capacity




PN 2126



PN 2126HD

Pipe Launcher


PN 2126, PN 2126HD

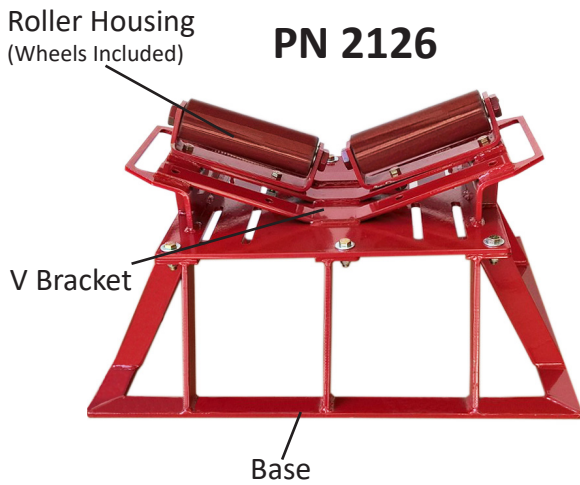

Pipe Launcher

Replacement Part Numbers

90038: Roller Housing (wheels included)
 31015: V Bracket
 2126-Base: Base

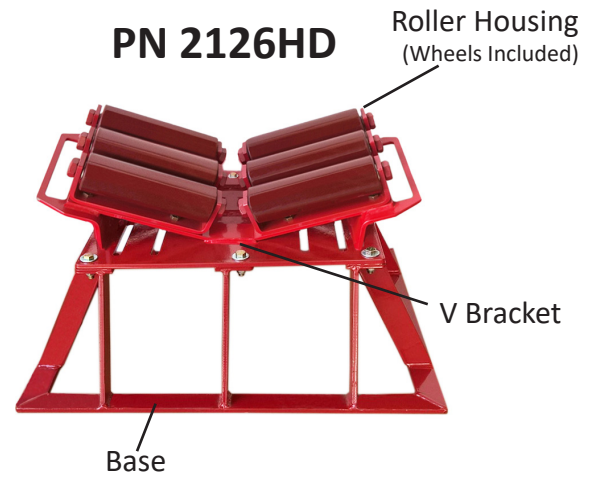

PN	Description	Pipe Capacity	Weight Capacity	Shipping Weight	Dimensions (inches) L x W x H1-H2
2126	Pipe Launcher (Two Rollers)	4-48 inch	10,000 lbs	162	30 x 36 x 15.5-18.75
2126HD	Pipe Launcher HD (Six Rollers)	4-48 inch	20,000 lbs	213	30 x 36 x 15.5-18.75

General Safety Instructions

- Do not misuse unit.** Never attempt to operate the equipment at more than the recommended capacity. Perform only the functions for which the Pipe Launcher are designed.
- Keep alert.** Never horseplay around equipment and keep bystanders at a safe distance. Do not allow children to be in the work areas or operate Rigging Roller.
- Keep work area clean.** For unobstructed movement around the Rigging Roller, always keep floor in work area clear of clutter.
- Examine the equipment.** Prior to using B&B products, inspect all parts to ensure that they are in proper operating condition. Inspect Beam Clamp for metal deformation, bends or breaks.
- Wear proper personal protection equipment.** Welding helmet or hard hat, welding gloves and safety shoes should be worn as a precaution while operating this stand.

Instructions for Use

Read and understand the instructions for safe performance. If uncertain about working with a B&B Pipe Launcher, always contact B&B prior to use. Understand the correct operations, applications and limitations. Store this safety manual in a clear area and always at a readily accessible site. Be especially aware of specific hazard signs. Extra copies are obtainable at B&B Pipe and Industrial Tools.

- Pipe Launcher is intended to move pipe laterally.
- Check Pipe Launcher capacity rating and make sure the Pipe Launcher is not overloaded.
- Check for damage before using. If damaged, remove from service and do not use.
- Only use Pipe Launcher for its intended purpose.
- Inspect all assembly bolts prior to using Pipe Launcher. Tighten if needed.



PIPE & INDUSTRIAL TOOLS