



***PIPE & INDUSTRIAL TOOLS***

---

# Operator's & Safety Manual

---



## **Adjustable Pipe Roller**

**4300 SERIES**

# Adjustable Pipe Roller



## Specifications

Model No. - 4300

Fixed Height - 32"

Shipping Weight- 32 lbs.

Capacity - 2,500 lbs.

Footprint - 24" x 30"

Max pipe diameter - 36"



# General Safety Instructions

1. **Do not misuse unit.** Never attempt to operate the equipment at more than the recommended capacity. Perform only the functions for which the jacks are designed.
2. **Keep alert.** Never horse play around equipment and keep bystanders at a safe distance. Do not allow children to be in the work areas or operate jacks.
3. **Keep work area clean.** For unobstructed movement around the stand, always keep floor in work area clear of clutter.
4. **Examine the equipment.** Prior to using B&B products, inspect all parts to ensure that they are in proper operating condition. Inspect legs for metal deformation, bends or breaks.
5. **Wear proper materials.** Welding helmet or hard hat, welding gloves and safety shoes should be worn as a precaution while operating this stand.
6. **Operate only on hard level surfaces.** Use the jack only on smooth and level surfaces to avoid tipping and the possibility of operator injury.

## Instructions for use.

Read and understand the instructions for safe performance. Before working with a B&B pipe rollers and always contact B&B when uncertain about the product. Understand the correct operations, applications, and limitations. Store this safety manual in a clear area and always at a readily accessible site. Be especially aware of specific hazards signs. Extra copies are obtainable at B&B Pipe and Industrial Tools.

1. Check Adjustable Pipe Roller capacity rating and make sure it is not overloaded.
2. Check for damage before using. If damaged, remove from service and do not use.
3. DO NOT hammer on pipe jacks! Hammering on pipe jack legs will cause damage to product; therefore, making it unsafe to operate.
4. Use on hard level surfaces. Be sure all feet of the Pipe Roller is on the floor.
5. Only use Adjustable Pipe Roller for its intended purposes.
6. Always support the pipe with at least two Adjustable Pipe Roller.
7. Place pipe onto Adjustable Pipe Roller. Do not drop the pipe onto the Adjustable Pipe Roller.
8. Do not adjust the rollers with the pipe loaded on the Adjustable Pipe Roller.
9. To avoid tipping. The Adjustable Pipe Roller should be properly aligned so that the pipe rests on both of the rollers of each Adjustable Pipe Roller being used. Never allow anyone under the pipe while it is supported by the Adjustable Pipe Roller.
10. Each roller on the Adjustable Pipe Roller has a roller locking screw. Tightening screw will prevent the roller from turning.