





PIPE & INDUSTRIAL TOOLS

Operator's & Safety Manual

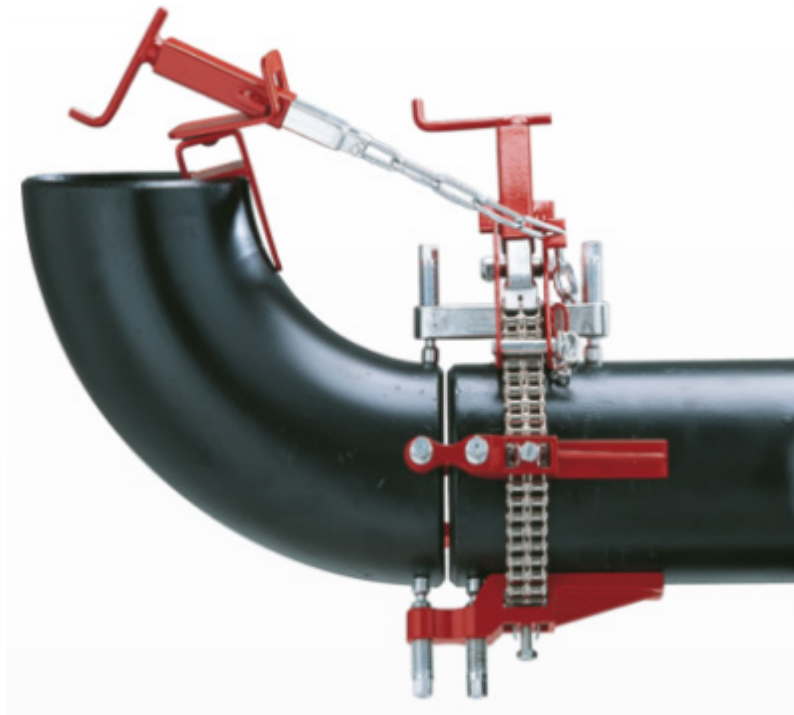

Chain Clamp

Chain Clamp

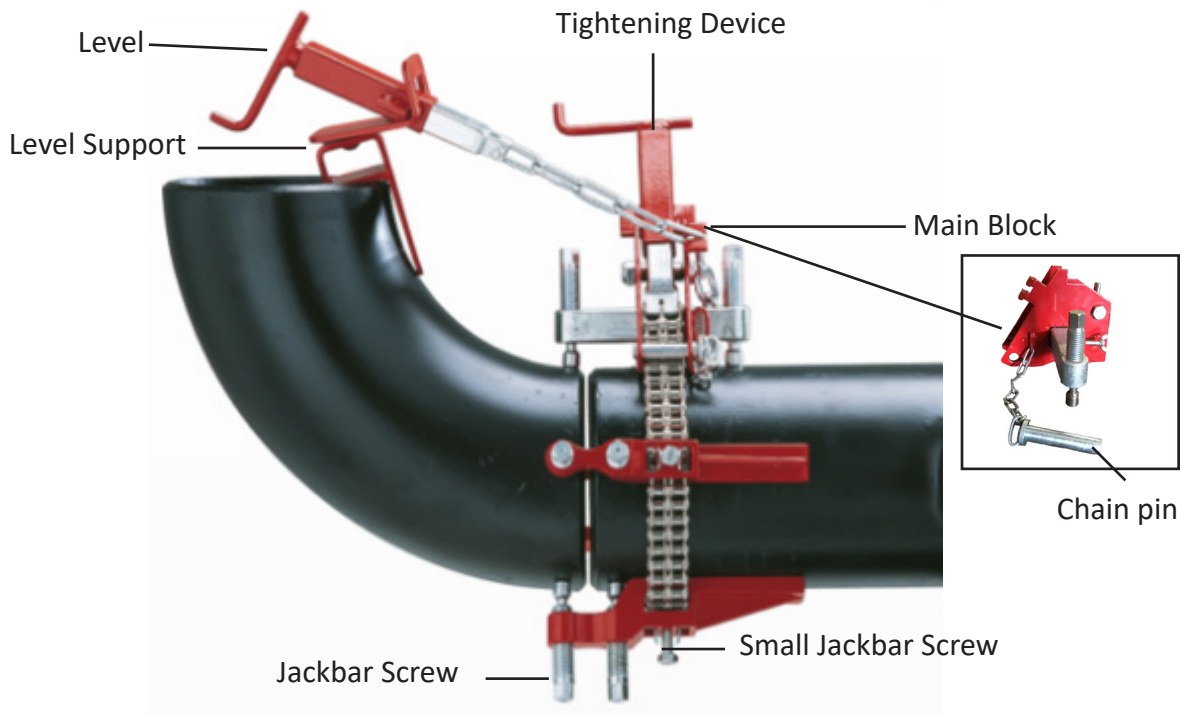

PN	Description	Inches	Jack bars	Shipping Weight
1230	Single Chain Clamp	1-12	4	27 lbs
1231	Single Chain Clamp Stainless	1-12	4	27 lbs
1232	Single Chain Clamp	4-20	7	72 lbs
1233	Single Chain Clamp Stainless	4-20	7	72 lbs
1234	Single Chain Clamp	6-36	8	144 lbs
1235	Single Chain Clamp Stainless	6-36	8	144 lbs
1236	Single Chain Clamp	10-54	13	180 lbs
1237	Single Chain Clamp Stainless	10-54	13	180lbs
1238	Single Chain Clamp	10-72	16	199 lbs
1239	Single Chain Clamp Stainless	10-72	16	199 lbs



General Safety Instructions

1. **Do not misuse unit.** Never attempt to operate the equipment at more than the recommended capacity. Perform only the functions for which the chain clamp is designed.
2. **Keep alert.** Never horseplay around equipment and keep bystanders at a safe distance. Do not allow children to be in the work areas or operate the chain clamp.
3. **Keep work area clean.** For unobstructed movement around the chain clamp, always keep floor in work area clear of clutter.
4. **Examine the equipment.** Prior to using B&B products, inspect all parts to ensure that they are in proper operating condition. Inspect legs for metal deformation, bends or breaks.
5. **Wear proper personal protection equipment.** Welding helmet or hard hat, welding gloves and safety shoes should be worn as a precaution while operating this stand.

Instructions for Use

Read and understand the instructions for safe performance. If uncertain about working with a B&B Chain Clamp, always contact B&B prior to use. Understand the correct operations, applications and limitations. Store this safety manual in a clear area and always at a readily accessible site. Be especially aware of specific hazards. Extra copies are available from B&B Pipe and Industrial Tools.

1. Do not use Chain Clamps for lifting.
2. Check for damage before using. If damaged, remove from service and do not use.
3. The Chain Clamp should never be used as the sole support for the pipe.
4. Only use Chain Clamps for its intended purposes.
5. Do not use any type of chain other than those obtained by B&B.
6. Using any other chain not supplied by B&B, will void warranty of the Chain Clamp.
7. Do not exceed pipe size range.